


Parts Diagram and List - PM-1600

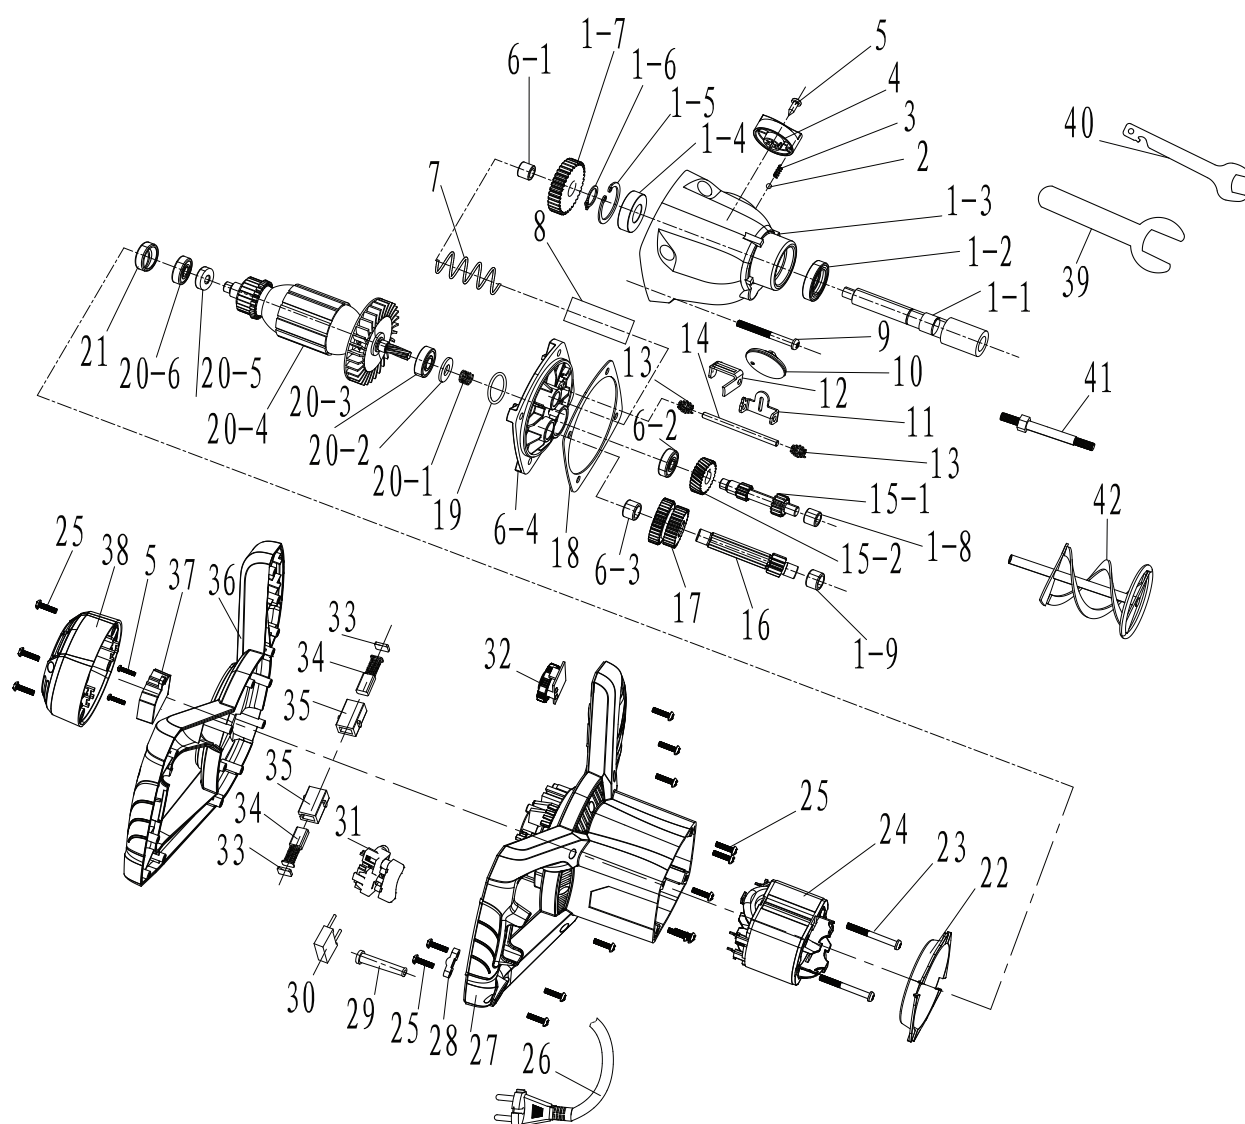

No	Parts Name	Qty
PM16-1	Gear Box	1
PM16-2	Steel Ball	1
PM16-3	Spring	1
PM16-4	Shift Knob	1
PM16-5	Screw ST3×12	3
PM16-6	Middle Cover	1
PM16-7	Spring	1
PM16-8	Oil Filler Pipe	1
PM16-9	Screw ST5×35	4
PM16-10	Shift Dial	1
PM16-11	Shift Fork A	1
PM16-12	Shift Fork B	1
PM16-13	Spring	2
PM16-14	Shift Guide	1
PM16-15	Main Driving	1
PM16-16	Assistant Driving Axle	1
PM16-17	Duplicate Gear	1
PM16-18	Paper Mat	1
PM16-19	O Ring	1
PM16-20	Rotor	1
PM16-21	Bearing Sleeve 608	1

PM16-22	Stator Seal	1
PM16-23	Screw ST4.8×55	2
PM16-24	Stator	1
PM16-25	Screw ST4×16-F	22
PM16-26	Cable	1
PM16-27	Housing	1
PM16-28	Cable Press Plate	1
PM16-29	Cable Sleeve	1
PM16-30	Capacitor	1
PM16-31	Switch	1
PM16-32	Potentiometer	1
PM16-33	Brush Cap	2
PM16-34	Carbon Brush	2
PM16-35	Brush Holder	2
PM16-36	Handle Cover	1
PM16-37	Constant Speed Device	1
PM16-38	Back Cover	1
PM16-39	Wrench	1
PM16-40	Wrench	1
PM16-41	Mixing Paddle	1
PM16-42	Mixing Paddle Head	1