


Parts Diagram and List - PMC-200

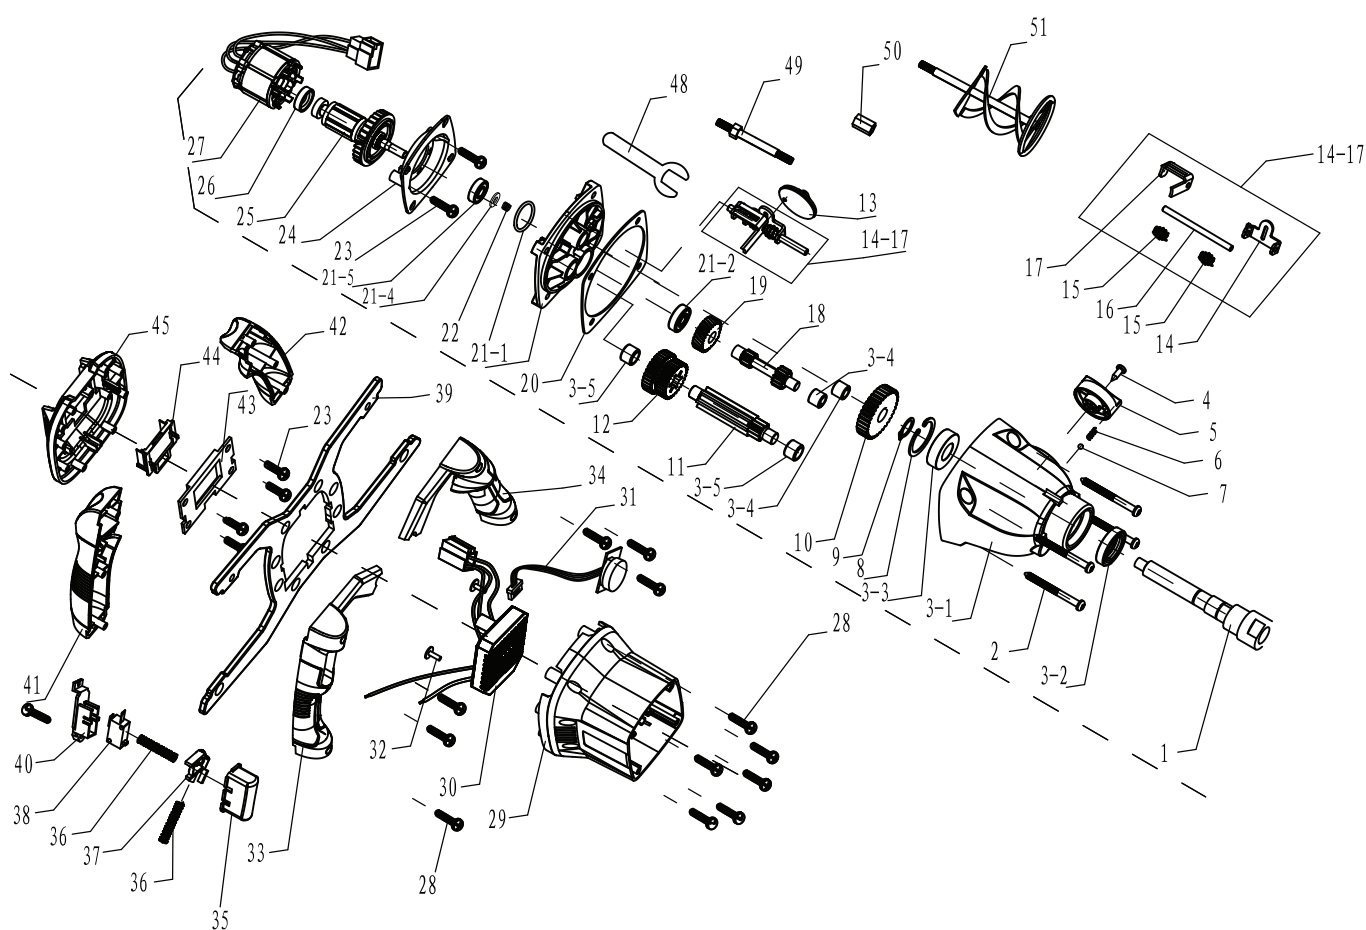

No	Parts Name	Qty
PMC2-1	Output Shaft	1
PMC2-2	Screw ST5×50	4
PMC2-3	Gear Box	
PMC2-4	Screw ST3×12	1
PMC2-5	Shift Knob	1
PMC2-6	Spring	1
PMC2-7	Steel Ball	1
PMC2-8	Shaft Ring	1
PMC2-9	shaft ring	1
PMC2-10	Big Gear	1
PMC2-11	Counter Drive Shaft	1
PMC2-12	Two Gang Gear	1
PMC2-13	Shift Dial	1
PMC2-14	Shift Fork A	1
PMC2-15	Shift Fork Spring	2
PMC2-16	Gear Guide	1
PMC2-17	Shift Fork B	1
PMC2-18	Main Driving Shaft	1
PMC2-19	Diagonal Gear	1
PMC2-20	Seal Pad	1
PMC2-21	Middle Cover Assembly	
PMC2-21-1	Middle Cover	1
PMC2-21-2	O Ring	1
PMC2-21-3	Rotor Spring	1
PMC2-21-4	Seal Pad	1
PMC2-21-5	Bearing 609RS	1
PMC2-22	Rotor Spring	1

PMC2-23	Screw ST4×12-F	7
PMC2-24	Fan Shroud	1
PMC2-25	Rotor	1
PMC2-26	Bearing Sleeve 607	1
PMC2-27	Stator	1
PMC2-28	Screw ST4×16-F	12
PMC2-29	Housing	1
PMC2-30	18V Brushless Controller	1
PMC2-31	Speed Controller	1
PMC2-32	Screw ST4×12	2
PMC2-33	Right Lower Handle	1
PMC2-34	Left Lower Handle	1
PMC2-35	Switch Button	1
PMC2-36	Spring	2
PMC2-37	Lock on Button	1
PMC2-38	Switch	1
PMC2-39	Handle Steel Frame	1
PMC2-40	Switch Base	1
PMC2-41	Right Upper Handle	1
PMC2-42	Left Upper Handle	1
PMC2-43	Contact Plate Holder Press Plate	1
PMC2-44	Battery Pack Plug-in	1
PMC2-45	Back Cover	1
PMC2-48	Wrench	2
PMC2-49	Paddle	1
PMC2-50	Screw	1
PMC2-51	Mixing Paddle	1