


Parts Diagram and List - MTC-200

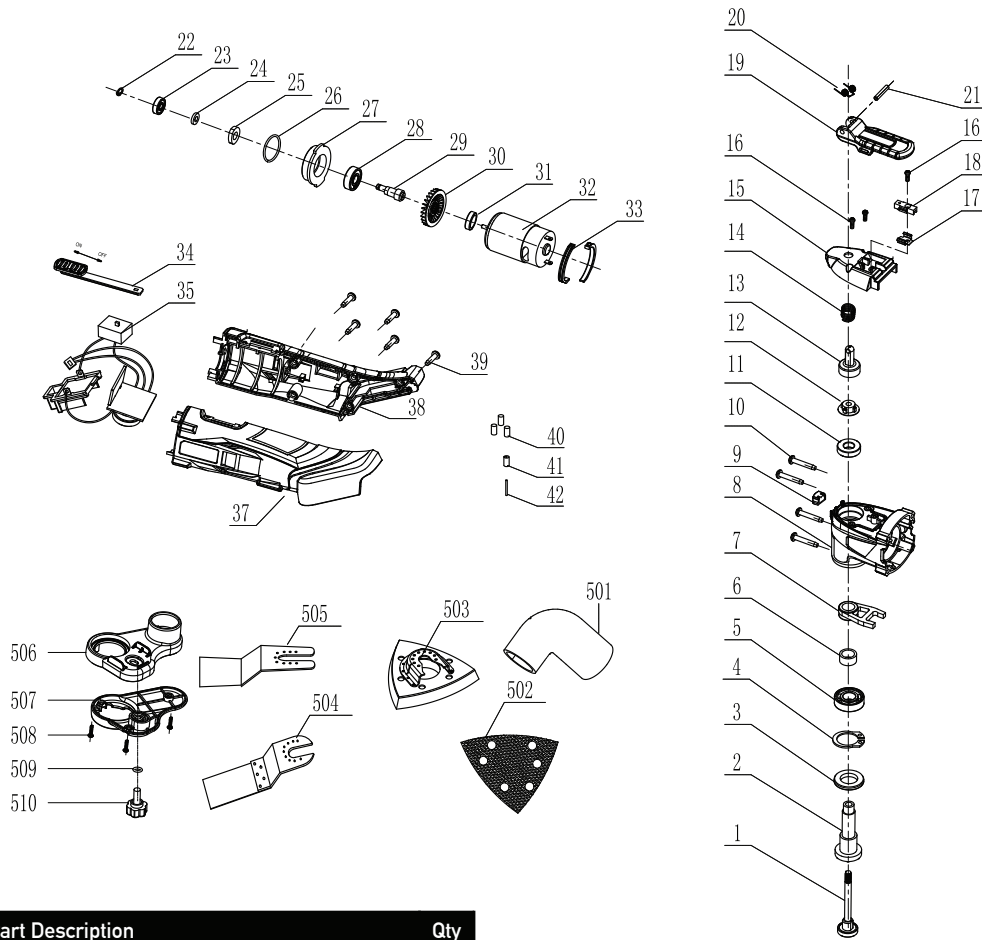

Part No	Part Description	Qty
MTC2-1	Draw-in Bolt	1
MTC2-2	Output Shaft	1
MTC2-3	Sealing Ring	1
MTC2-4	Washer	1
MTC2-5	Bearing 6001Z2	1
MTC2-6	Steel Sleeve	1
MTC2-7	Fork	1
MTC2-8	Gear Box	1
MTC2-9	Light Cover	1
MTC2-10	Screw ST4*25-F	4
MTC2-11	Bearing 6900Z2	1
MTC2-12	Nut	1
MTC2-13	Lock Pole	1
MTC2-14	Spring	1
MTC2-15	Gear Box Cover	1
MTC2-16	Screw M3*12	3
MTC2-17	Lock Sheet	1
MTC2-18	Plastic Base	1
MTC2-19	Trigger	1
MTC2-20	Spring	1
MTC2-21	Round Pin	1
MTC2-22	Washer	1
MTC2-23	Bearing 625	1
MTC2-24	Plastic Washer	1
MTC2-25	Balance Block	1
MTC2-26	O Ring	1
MTC2-27	Middle Cover	1

MTC2-28	Bearing 608Z2	1
MTC2-29	Eccentric Shaft	1
MTC2-30	Fan Blade	1
MTC2-31	Rubber Sleeve	1
MTC2-32	Motor	1
MTC2-33	Damping Ring	2
MTC2-34	Switch Button	1
MTC2-35	Speed Controller Assy	1
MTC2-37	Left housing	1
MTC2-38	Right housing	1
MTC2-39	Screw	4
MTC2-40	Rubber Column	3
MTC2-41	Rubber Wheel	1
MTC2-42	Round Pin	1
MTC2-43	Oil	1
MTC2-44	Heat Shrink Tube	5
MTC2-501	Connector	1
MTC2-502	Sanding Paper	1
MTC2-503	Sanding Base	1
MTC2-504	Blade	1
MTC2-505	Scraper	1
MTC2-506	Vacuum Tube Upper Cover	1
MTC2-507	Vacuum Tube Lower Cover	1
MTC2-508	Screw ST3*8	3
MTC2-509	O ring	1
MTC2-510	Screw Bolt	1