


Parts Diagram and List

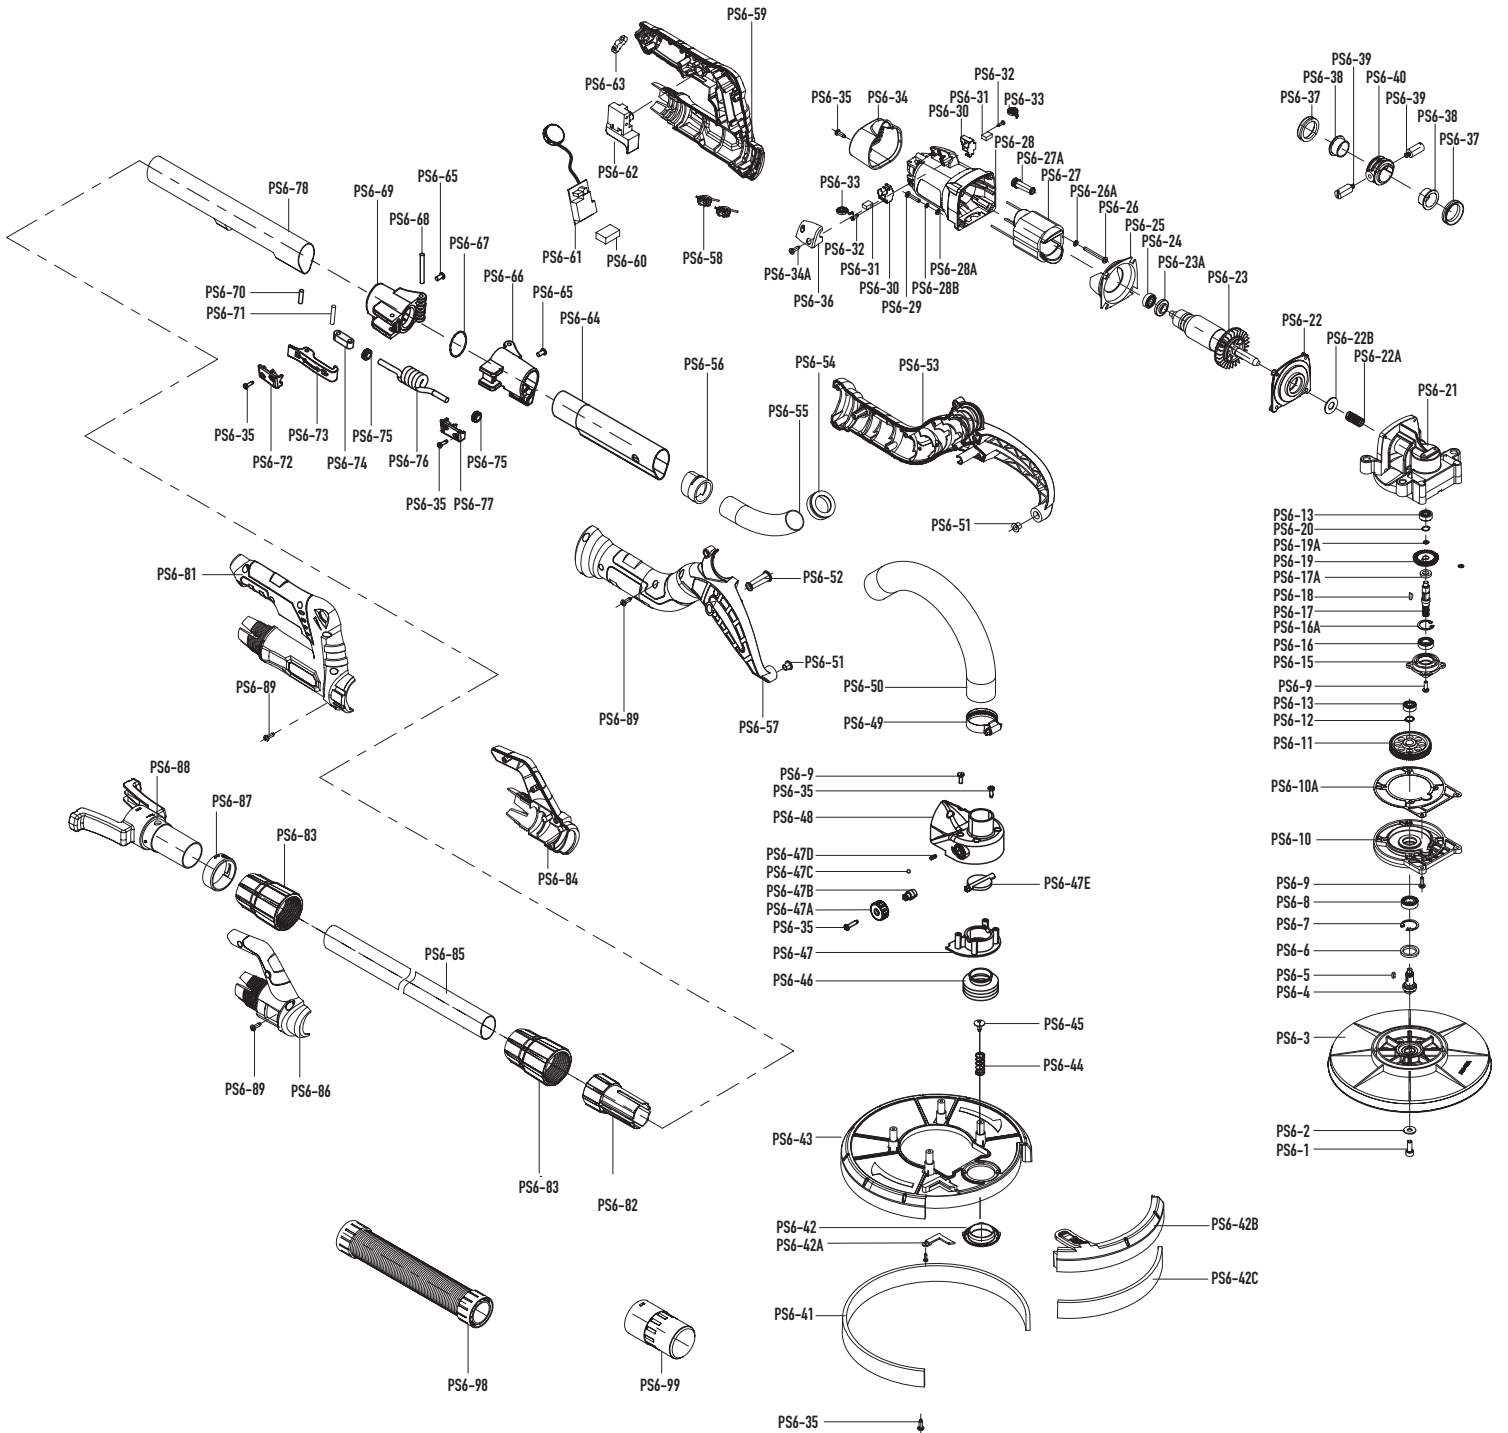

Parts Diagram and List (continued)

No	Parts Name	Qty
PS6-1	Screw	1
PS6-2	Washer	1
PS6-3	Hook & Loop Adaptor	1
PS6-4	Output Shaft	1
PS6-5	Flat Key	1
PS6-6	Oil Seal	1
PS6-7	Collar	1
PS6-8	Ball Bearing	1
PS6-9	Screw M4*12	8
PS6-9A	Screw M4*10	4
PS6-10	Bearing Cover (big)	1
PS6-10A	Paper Washer	1
PS6-11	End Gear	1
PS6-12	Circlip	1
PS6-13	Ball Bearing	2
PS6-15	Bearing Cover (small)	1
PS6-16	Ball Bearing	1
PS6-16A	Circlip	1
PS6-17	Main drive Shaft	1
PS6-17A	Washer	1
PS6-18	Semi-circular Key	1
PS6-19	Tapered Gear	1
PS6-19A	Washer	1
PS6-20	Collar	1
PS6-21	Gear Box	1
PS6-22	Middle Cover	1
PS6-22A	Spring (motor)	1
PS6-22B	Wool Cap	1
PS6-22C	Washer	1
PS6-23	Rotor	1
PS6-23A	Anti-dust Ring	1
PS6-24	Ball Bearing	1
PS6-25	Anti-wind Ring	1
PS6-26	Screw	2
PS6-26A	Circular Button $\phi 4.2$	1

No	Parts Name	Qty
PS6-27	Stator	1
PS6-27A	Sleeve	1
PS6-28	Motor Housing	1
PS6-28A	Flat Washer	4
PS6-28B	Flexible Washer	4
PS6-29	Screw	4
PS6-30	Brush Holder	2
PS6-31	Carbon Brush	2
PS6-32	Screw	2
PS6-33	Coil Spring	2
PS6-34	Back Cover	1
PS6-34A	Screw	12
PS6-35	Screw	11
PS6-36	Press Block (on motor housing)	1
PS6-37	Horn Damping	2
PS6-38	Rubber Sleeve (Large)	2
PS6-39	Screw Pin	2
PS6-40	Flexible Sleeve	1
PS6-41	Bush Skirt (main)	1
PS6-42	Press plate (for sanding pad)	1
PS6-42A	Press Plate (for sleeve)	1
PS6-42B	Side Cover	1
PS6-42C	Bush Skirt (small section)	1
PS6-43	Sanding Pad Cover	1
PS6-44	Compressed Spring	4
PS6-45	Washer	4
PS6-46	Waved Sleeve	1
PS6-47	End Block (for dust collection cover)	1
PS6-47A	Suction Power Adjusting Ring	1
PS6-47B	Connection Shaft	1
PS6-47C	Steel Ball	2
PS6-47D	Steel Ball Spring	2
PS6-47E	Flygate	1
PS6-48	Dust Collection Cover	1
PS6-49	Hoop 25-38	1

Parts Diagram and List (continued)

No	Parts Name	Qty
PS6-50	Hose 350	1
PS6-51	Cable Sleeve (Small)	2
PS6-52	Rubber Cover (Small)	1
PS6-53	Handle Stand (Right)	1
PS6-54	Connector $\varnothing 28$	1
PS6-55	Soft Plastic Pipe $\Phi 28$	1
PS6-56	Elliptical Connector	1
PS6-57	Handle Stand (Left)	1
PS6-58	Main Handle (Left)	1
PS6-59	Electric Sensor	2
PS6-60	Electric Capacity	1
PS6-61	Electronic Speed Control Plate	1
PS6-62	Switch	1
PS6-63	Press Plate (for cable sleeve)	1
PS6-64	Main Tube (Front)	1
PS6-65	Clinch Bolt $\varnothing 5$	2
PS6-66	Hinge Sleeve (Front)	1
PS6-67	Sealed Ring $\varnothing 1.2$	1
PS6-68	Pin $\varnothing 5 \times 45$	1
PS6-69	Hinge Sleeve (Back)	1
PS6-70	Pin $\varnothing 5 \times 16.8$	1
PS6-71	Pin $\varnothing 5 \times 30$	1
PS6-72	Press Plate Cable (Back)	1
PS6-73	Lock Wrench	1
PS6-74	Brace	1
PS6-75	Sleeve #2	2
PS6-76	Spring	1
PS6-77	Press Plate Cable (Front)	1
PS6-78	Main Tube (Back)	1
PS6-81	Main Handle (Right)	1
PS6-82	Extension Tube Insert	1
PS6-83	Screw Nut (Back)	2
PS6-84	Left Sub-Handle	1
PS6-85	Black Extension Tube (single access)	1
PS6-86	Right Sub-Handle	1

No	Parts Name	Qty
PS6-87	Adjustable Ring	1
PS6-88	Protection Connection Adapter	1
PS6-89	Screw ST3.9*16	23
PS6-98	Sander Hose	
PS6-99	Sander / Vacuum Hose Connector	1