

TRIM-TEX

DRYWALL PRODUCTS


Trim-Tex

FAST EDGE Paper

Corner Bead

Extended paper surface for increased bonding strength


Fast Edge Paper is laminated with high quality paper and features a low profile sharp nose edge, no mud bump and tapered legs that significantly reduces the amount of compound required to finish plasterboard corners. This lower compound usage equals significant material savings. The nose also acts as a hinge to accommodate framing variances. With no holes in the mud legs, Fast Edge Paper drastically cuts down installation and finishing time. While the patented mud locks and paper layer deliver superior bond to the plasterboard without the need for staples or spray adhesive. Fast Edge Paper creates a smooth transition from corner bead to plasterboard.

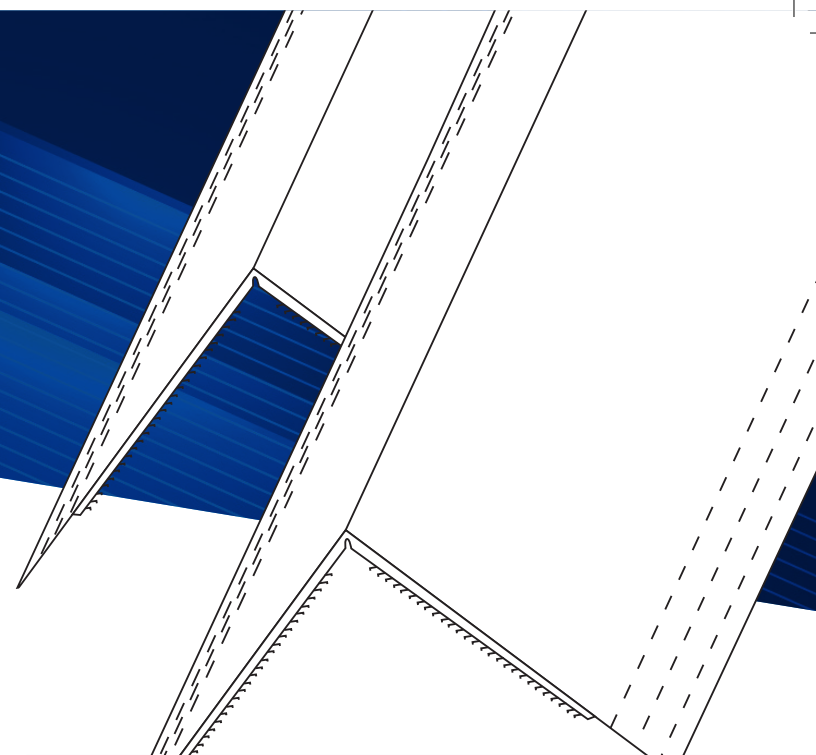

**No Glue, No Staples.
Mud & Done**

Installation Instructions

- STEP 1:** Apply directly to Fast Edge Paper mud legs or to the plasterboard corner using a blade or Tapepro Compound Tube (CA-T) and Outside Angle Head (OAH-W).
- STEP 2:** Place bead onto the corner and press into place using Tapepro Outside Corner Roller (OCR-W).
- STEP 3:** Wipe the surface of Fast Edge Paper clean of excess mud. Then use a knife and blade on the fill coat. If using base compound allow to completely dry, if using multi-purpose compound fill coat can be applied straight away.
- STEP 4:** When dry, apply final coat by hand with a knife or speed up the process using a Tapepro Flat Box.

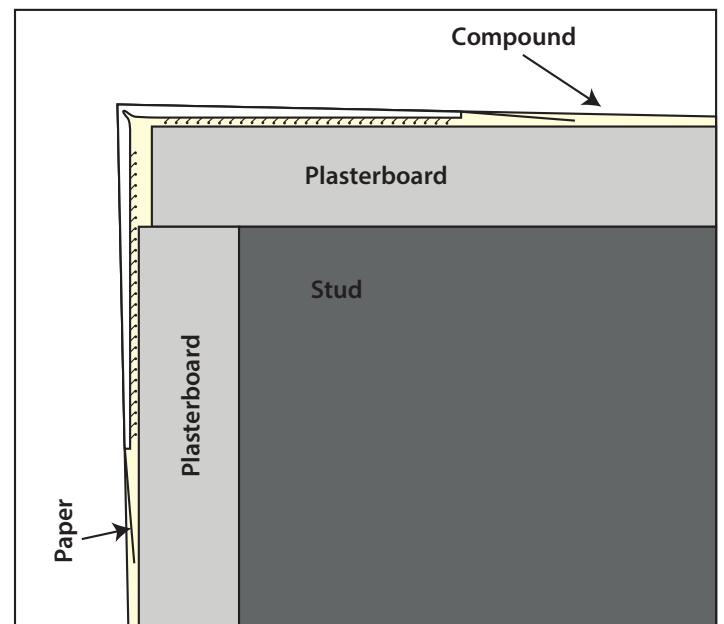

For more information contact Wallboard Tools:

☎ 1300 653 177 📠 1300 657 442

✉ sales@wallboardtools.com.au 🌐 www.wallboardtools.com.au



1300 653 177
Gold Coast | Sydney | Melbourne | Perth