


TRIM-TEX

DRYWALL PRODUCTS

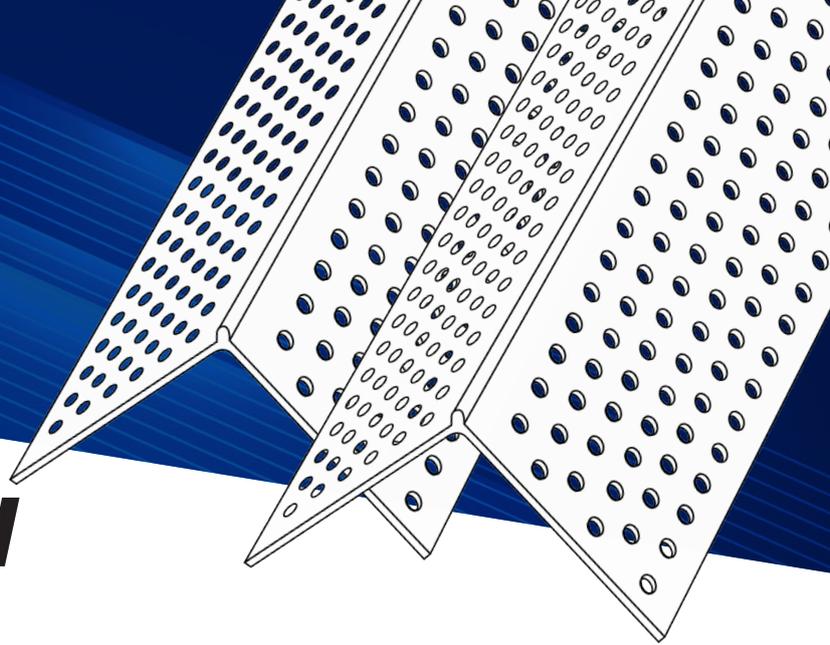

Low Profile Rigid Corner Bead

- ✓ **Requires Less Compound**
- ✓ **No Setback Required**
- ✓ **Spray & Staple Installation**

Stock Code: 72-R010LP
Length: 3.0m
Pcs per Ctn: 45

Benefits of Rigid LP Corner Bead



- The bead cuts easily without cutting you
- Being rigid, the trim holds it's line
- Fastens without time wasting staple fails
- Requires less scraping or filling of pinholes*
- Has a crisp, sharp and low corner profile
- With great impact and dent resistance
- While always remaining corrosion free
- And suffers less damage in transport

**when combined with a thick first coat*

Installation

Install with Spray Adhesive and Staples

- STEP 1:** Ensure the substrate is true and plumb
- STEP 2:** Remove excess overhang of plasterboard prior to bead installation
- STEP 3:** Cut Rigid Bead to length leaving 6mm minimum clearance from the floor for vertical installation
- STEP 4:** Spray a liberal coat of Trim-Tex 847 to the inside of the bead as well as the surface of the plasterboard corner
- STEP 5:** Place and position the bead on the corner and apply firm even pressure to the bead with the Trim-Tex Cleaning Tool
- STEP 6:** Staple bead through the mud leg at 200mm centres
- STEP 7:** Set the Trim-Tex bead with board manufacturer approved compounds and recommendations

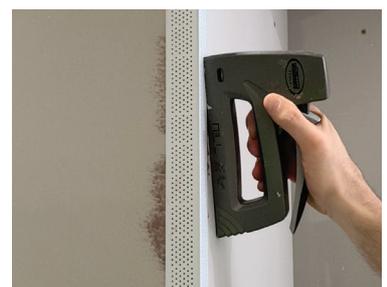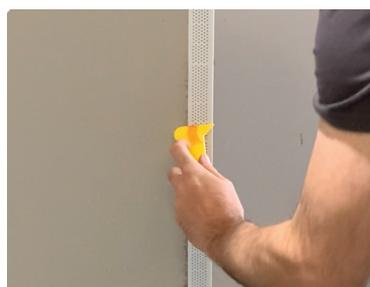

For more information contact Wallboard Tools:

1300 653 177 1300 657 442

sales@wallboardtools.com.au www.wallboardtools.com.au



1300 653 177
Gold Coast | Sydney | Melbourne | Perth