

TRIM-TEX

DRYWALL PRODUCTS

Trim-Tex

FAST EDGE

Corner Bead


Save a day with one less coat

Fast Edge features a low profile sharp nose edge, no mud bump and tapered legs that significantly reduces the amount of compound required to finish plasterboard corners. This lower compound usage equals significant material savings. The nose also acts as a hinge to accommodate framing variances. With no holes in the mud legs, Fast Edge drastically cuts down installation and finishing time. While the patented mud locks deliver superior bond to the plasterboard without the need for staples or spray adhesive.

No Glue, No Staples.
Mud & Done

Installation Instructions

- STEP 1:** Apply compound directly to Fast Edge mud legs or to the plasterboard corner using a blade or Tapepro Compound Tube (CA-T) and Outside Angle Head (OAH-W).
- STEP 2:** Place Fast Edge onto the corner and press into place using Tapepro Outside Corner Roller (OCR-W).
- STEP 3:** Wipe the surface of Fast Edge clean of excess mud. Then use a knife and blade on the fill coat. If using base compound allow to completely dry, if using multi-purpose compound fill coat can be applied straight away.
- STEP 4:** When dry, apply final coat by hand with a knife or speed up the process using a Tapepro Flat Box.

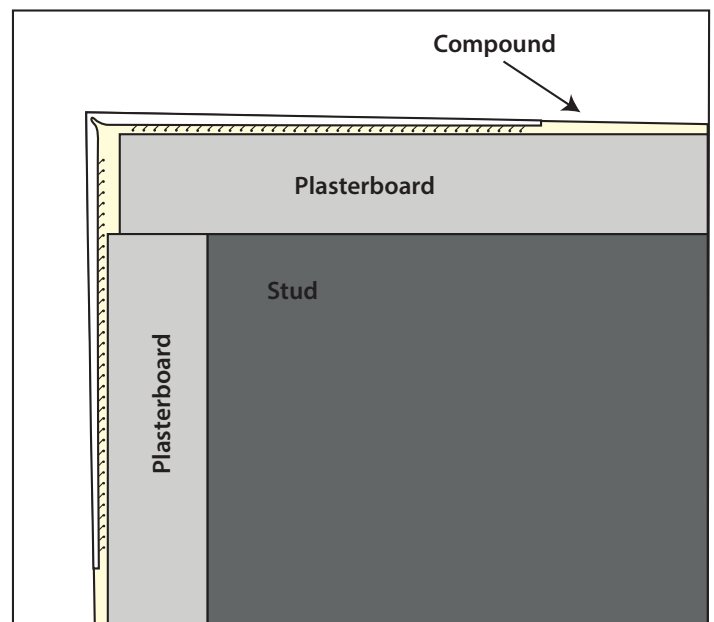

Wallboard
TOOLS™

For more information contact Wallboard Tools:

☎ 1300 653 177 📠 1300 657 442

✉ sales@wallboardtools.com.au 🌐 www.wallboardtools.com.au



1300 653 177

Gold Coast | Sydney | Melbourne | Perth