






### TEAR AWAY™ SHADOW BEAD

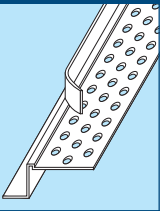


- 72-5510T** Tearaway Shadow Bead 13x13mm (3000mm) 
- 72-5390T** Tearaway Shadow Bead 6x10mm (3000mm) 
- 72-5380T** Tearaway Shadow Bead 10x10mm (3000mm) 

### ARCHWAY SHADOW BEADS

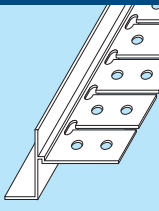


- 72-5550T** Archway Shadow Bead 10x10mm Tearaway (3000mm) 

### ARCHITECTURAL REVEAL BEADS

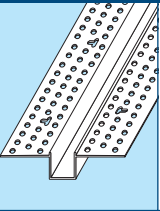

- 72-AS5150** Reveal Bead 6x6mm (3000mm)
- 72-AS5130** Reveal Bead 10x10mm (3000mm)
- 72-AS5110** Reveal Bead 13x13mm (3000mm)
- 72-AS5310** Reveal Bead 13x25mm (3000mm))

### REVEAL BEADS

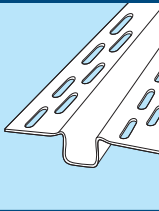

- 72-5150** Reveal Bead 6x6mm (3000mm)
- 72-5110** Reveal Bead 13x13mm (3000mm)
- 72-5310** Reveal Bead 13x25mm (3000mm)

### INSTALLATION:

- Ensure the substrate is true and plumb
- Remove excess overhang of plasterboard prior to installation of Trim-Tex beads
- Spray a liberal coat of Trim-Tex 847 Spray Adhesive to the inside of the Trim-Tex bead as well as the surface of the plasterboard where the Trim-Tex bead is to be installed
- Apply firm even pressure to the mud leg using the Trim-Tex Cleaning Tool to ensure a solid bond
- Staple through the set leg of the Trim-Tex bead at 200mm centres maximum, using 10mm staples. When installing Flexible Shadow Bead staple every tab for ultimate bond
- Re-apply pressure to the set leg of the Trim-Tex bead if required
- Set the Trim-Tex bead with approved compounds (refer to standard ASTM-C475 or the Plasterboard Manufacturers recommendations)
- Reveal Beads can be installed into curved walls, soffits, columns etc

### NOTES:

- The incorrect installation of Trim-Tex Beads will void any Warranty (see Trim-Tex Product Warranty at [www.wallboardtools.com.au](http://www.wallboardtools.com.au))
- Refer to UV Stabilized Trim-Tex beads or RenderEdge beads for external use
- On vertical installation of Trim-Tex beads allow 6mm minimum clearance above floor for structural movement

### Spray Adhesive 847

Spray a liberal coat of 847 to the inside of the bead as well as the surface of the plasterboard. Apply firm even pressure to ensure a solid bond.



Trim-Tex 847 Spray Adhesive is a high tack, pressure sensitive spray adhesive specifically designed to be used to install Trim-Tex Beads.



**PRODUCT DATA SHEET**

