

TAPEPRO ***DRYWALL TOOLS***




TAPEPRO FLAT BOX BEAD GUIDES

TAPEPRO FLAT BOX BEAD GUIDES **TAPEPRO DRYWALL TOOLS**

The Tapepro Flat Box Bead Guides are designed to be fitted to Tapepro, Blue Line or Premier Flat Boxes and provide a spring loaded guide for use on external corners or shadow bead.

FITTING THE BEAD GUIDES

1. Check your Flat Box to see if there is a hole drilled in both side plates adjacent to the skids. If there are no pre-existing holes, drill a 2mm (5/64") hole in each side plate (see FBBG-1).
2. Remove the F007 screws retaining the skids, then fit the Bead Guide by feeding the spring into the hole (see FBBG-2).
3. Use supplied screws (AT234) and bushes (F056) to secure (see FBBG-3).
4. Test the operation to ensure the Flat Box Bead Guides move freely.

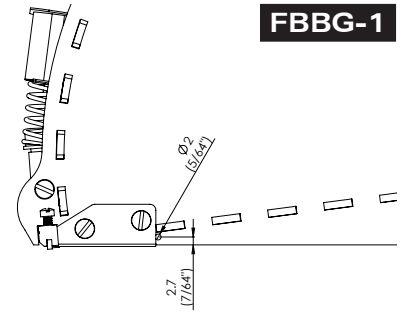

FBBG-1

USING THE TAPEPRO BEAD GUIDES

It is recommended that the bead be hand set with chemical setting or all purpose compound first.


External Corners

1. Place the Tapepro Flat Box on the joint while applying pressure and drop the outside guide over the edge. Release the brake allowing the box and handle to find their own natural position. The interior Guide will compress out of the way (see FBBG-4).
2. Run the Flat Box along the joint stopping about 300mm from the end. Turn around and finish in the opposite direction.

Tip: There is enough angular deflection of the guide to ensure they don't take off compound or leave marks when doing the other side of an external.

Shadow Beads

1. If necessary, remove the tear away strips from the bead.
2. Place the Tapepro Flat Box on the bead and drop the outside guide into the recess of the Shadow Line. Release the brake allowing the box and handle to find their own natural position. The interior Guide will compress out of the way.
3. Run the Flat Box along the bead keeping the bead guide against the shoulder. Stop about 300mm from the end. Turn around and finish in the opposite direction.

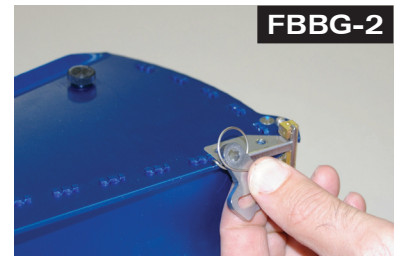

FBBG-2



FBBG-3



FBBG-4



FBBG-5

RETROFIT AND REPAIR

Contact one of the Tapepro distributors to arrange fitting of your Tapepro Flat Box Bead Guides or service and repair of your Tapepro Tool.

ALSO AVAILABLE FROM TAPEPRO

The Tapepro Flat Box Handle range:

- > 900mm Flat Box Handle - FFBH-900
- > 1050mm Flat Box Handle - FFBH-1050
- > 1200mm Flat Box Handle - FFBH-1200
- > 1500mm Flat Box Handle - FFBH-1500
- > 1800mm Flat Box Handle - FFBH-1800

The Tapepro Flat Box range:

- > 200mm Flat Box - FFB-200
- > 250mm Flat Box - FFB-250
- > 300mm Flat Box - FFB-300

TAPEPRO
DRYWALL TOOLS

For further information contact: TAPEPRO DRYWALL TOOLS: 2/44 Dover Drive; West Burleigh QLD 4220 Australia
Phone: +61 7 5520 6022 | Fax: +61 7 5520 5973 | Email: info@tapepro.com | Website: www.tapepro.com